


- ① STEP 1: FIELD CUT FOAM AS REQUIRED.
- ② STEP 2: ATTACH S-CLIP TO SHIP LAP OF ACSYS PANEL  
W/ 1/4"-14 X 3/4" SELF DRILLING FASTENERS  
@ 1'-0" O.C.
- ③ STEP 3: ATTACH FIELD 90 TO S-CLIP  
W/ 1/4"-14 X 3/4" SELF DRILLING FASTENERS  
@ 1'-0" O.C.

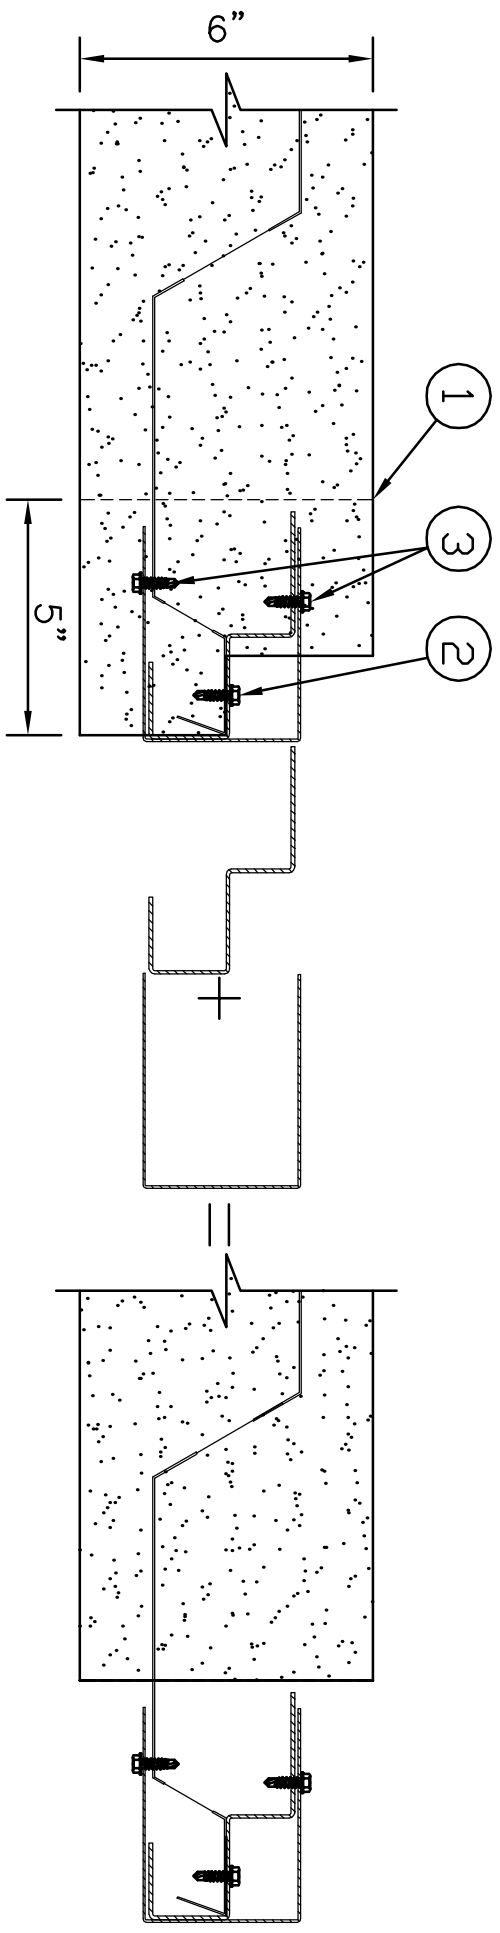

C660 WALL ENDS WITH ACSYS

ACSYS

REV DATE  
12-11-07